SUBJECT:


LLB SERIES H.I.D. LUMINAIRE

Day-Brite Lighting INSTRUCTION SHEET


<u>WARNING:</u> <u>ELECTRICAL SHOCK POTENTIAL</u> !! DO NOT ATTEMPT TO INSTALL, MAINTAIN OR RELAMP WITHOUT DIS-CONNECTING ALL POWER. FAILURE TO DISCONNECT POWER CAN RESULT IN ELECTROCUTION, SHOCK OR SEVERE BURNS.

CAUTION: This fixture is designed for permanent installation in ordinary (Non-Hazardous) locations in accordance with the National Electrical Code and all applicable local codes. Do not use in areas of limited ventilation or in high ambient enclosures. The lamp and fixture operate at high temperatures, contact with combustible materials can cause fire and personal contact can cause severe burns.

CONDUIT MOUNTING 3/4" CONDUIT (BY OTHERS) LOCKING NUT — SLIP ONTO CONDUIT BEFORE ATTACHING HANGER HUB HANGER HUB — THREAD ONTO CONDUIT (MINIMUM OF 5 FULL TURNS) SET SCREW — TIGHTEN TO SECURE HANGER HUB TO CONDUIT WRENCH FLATS — FOR TIGHTENING HANGER HUB ONTO CONDUIT ARROWS (3) — POINT ANY ARROW IN THE DIRECTION YOU WISH THE BALLAST HOUSING WIRING COVER TO FACE SUPPLY LEADS AND GROUND WIRE

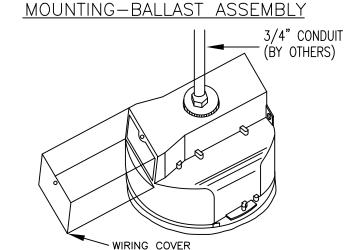

- 1) LIFT BALLAST ASSEMBLY ONTO THE HANGER HUB AND ROTATE ASSEMBLY (60°) UNTIL IT SEATS SECURELY ON HUB.
- 2) TURN LOCKING NUT (HAND TIGHT) ONTO HANGER HUB TO SECURE BALLAST ASSEMBLY. WARNING: LOCKING NUT MUST ENGAGE THREADS ON HANGER HUB AND BE HAND TIGHTENED TO INSURE THAT FIXTURE IS PROPERLY SEATED ON HUB. CAUTION: THE LOCKING NUT IS PROVIDED WITH WRENCH FLATS TO BE USED ONLY IF NECESSARY TO REMOVE NUT.
- MAKE SUPPLY CONNECTIONS (90°C WIRE) AND REPLACE WIRE COVER.

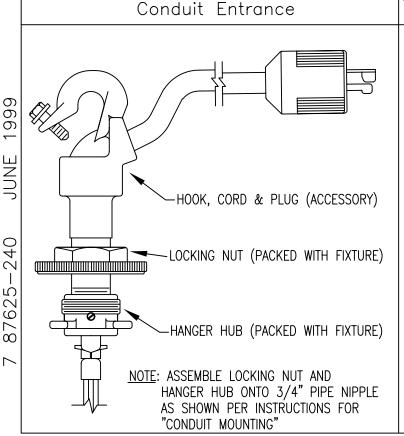

NOTE: For Wet Location, Seal

